



## SERVICE HINTS

### H 8 HORN RELAY

2-3 : CLOSED WITH HORN SW ON

### ○ : PARTS LOCATION

| CODE | SEE PAGE   | CODE | SEE PAGE   | CODE | SEE PAGE   |
|------|------------|------|------------|------|------------|
| C16  | 28         | H 4  | 26 (22R-E) | H 5  | 26 (22R-E) |
| H 4  | 24 (3VZ-E) | H 5  | 24 (3VZ-E) | H 8  | 28         |

### □ : RELAY BLOCKS

| CODE | SEE PAGE | RELAY BLOCKS (RELAY BLOCK LOCATION)  |
|------|----------|--------------------------------------|
| 2    | 22       | R/B NO. 2 (ENGINE COMPARTMENT RIGHT) |

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| CODE | SEE PAGE   | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION) |
|------|------------|--|
| EB1  | 30 (3VZ-E) | COWL WIRE AND ENGINE ROOM MAIN WIRE (R/B NO. 2)            |
|      | 32 (22R-E) |  |
| IB3  | 34         | ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)      |

### ○ : SPLICE POINTS

| CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS | CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS |
|------|----------|---------------------------------|------|----------|---------------------------------|
| I19  | 34       | COWL WIRE                       |      |          |                                 |