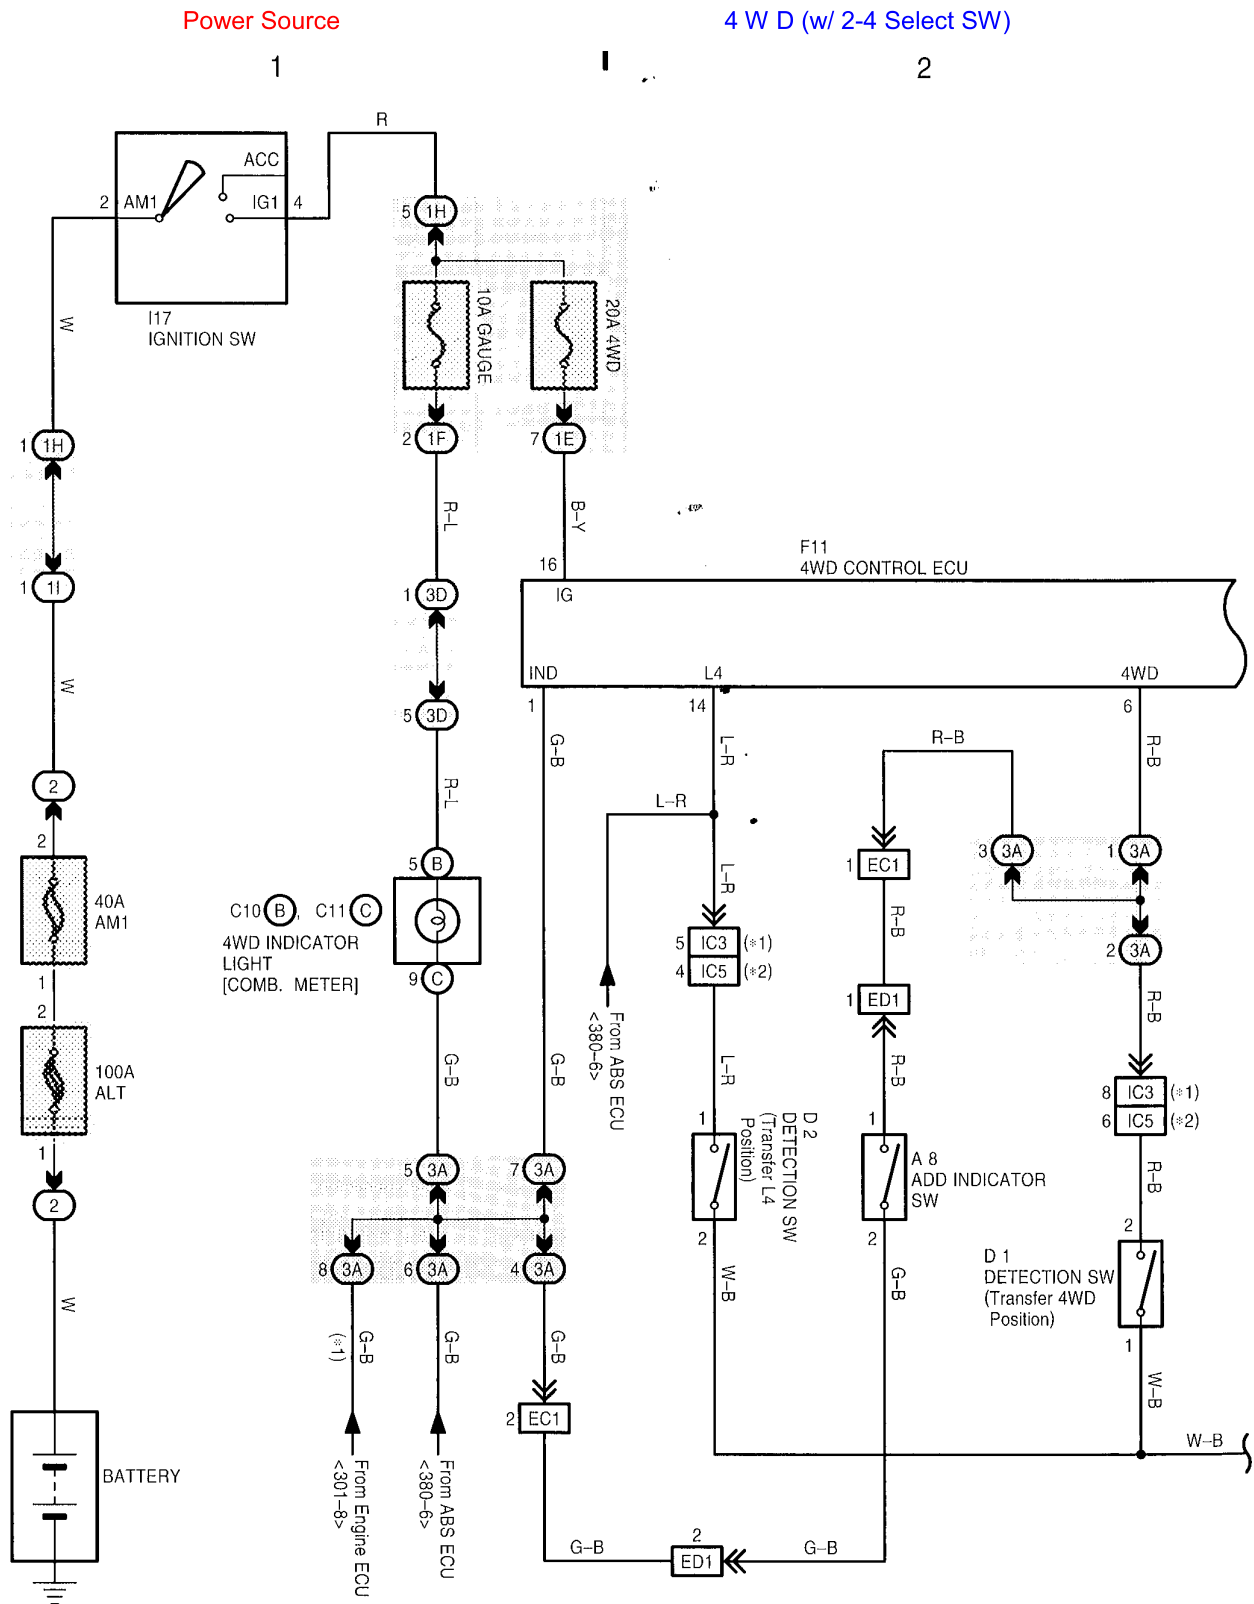
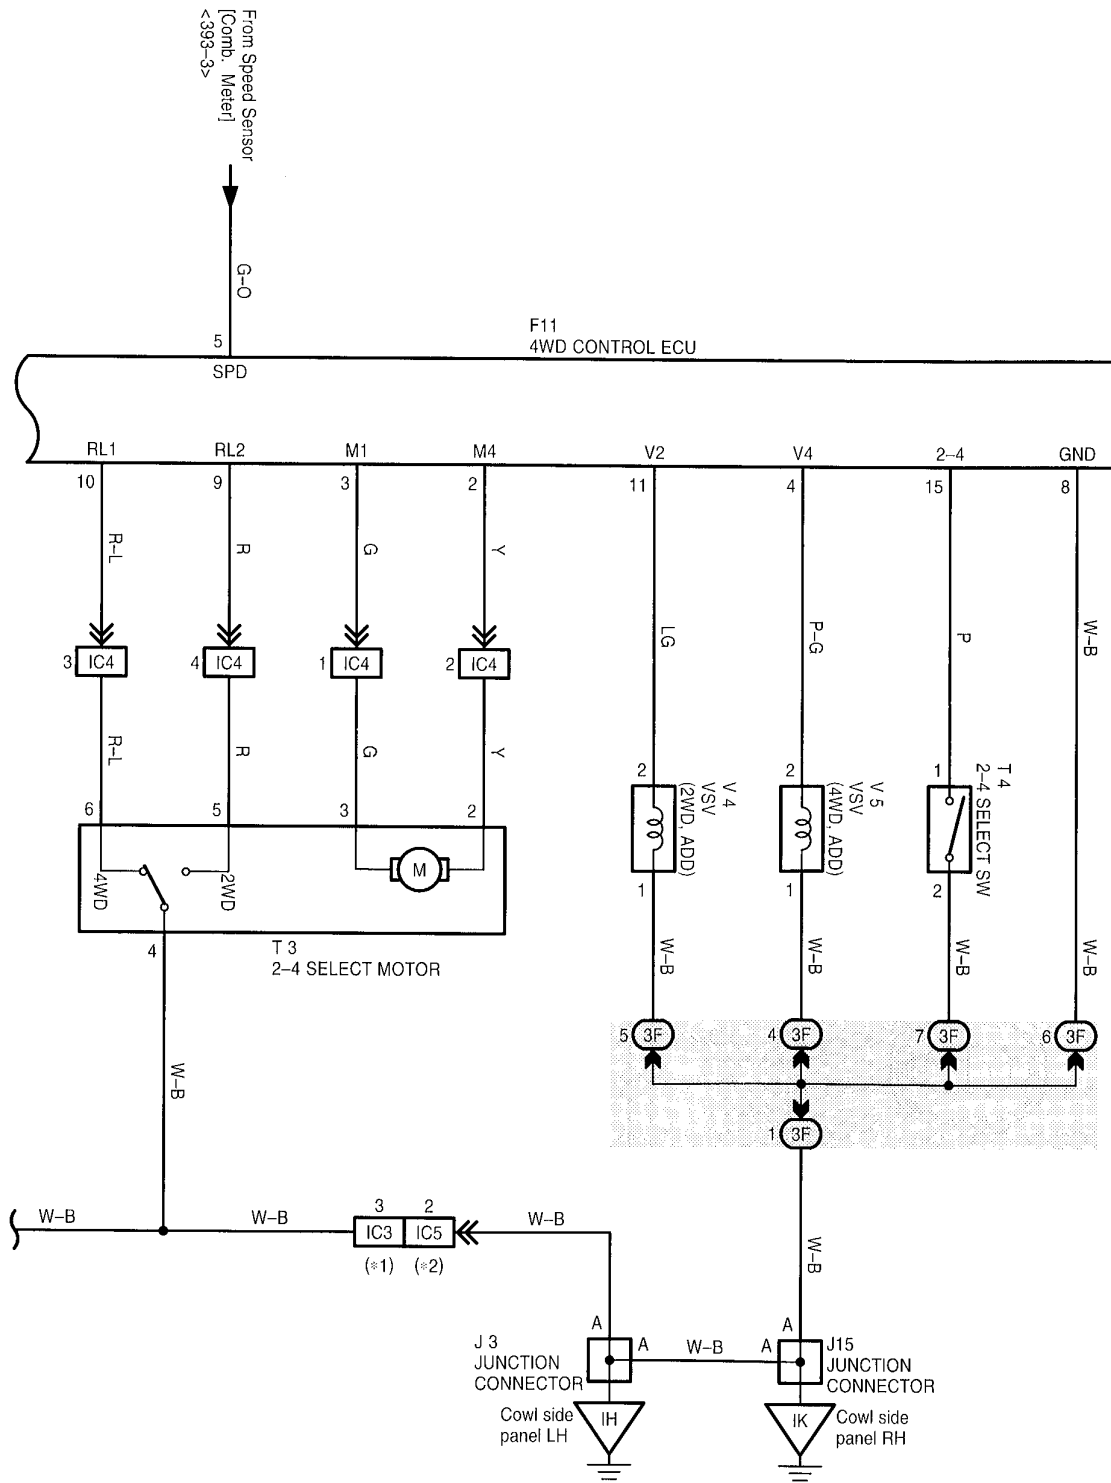
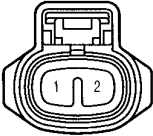
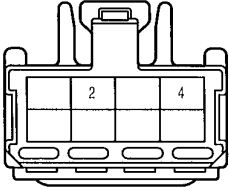
 
 
 
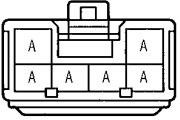


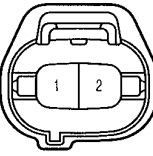

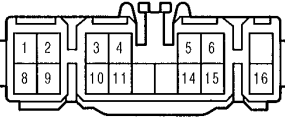
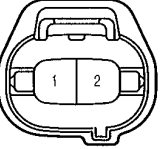
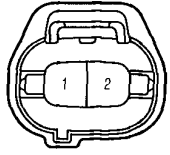


F ELECTRICAL WIRING DIAGRAM (System Circuits)





PARTS CODE	PARTS & CONNECTOR TYPE	LOCATION	PARTS CODE	PARTS & CONNECTOR TYPE	LOCATION
A 8	ADD INDICATOR SW GRAY 	370-2	I17	IGNITION SW 	370-1
C10	(B) 4WD INDICATOR LIGHT [COMB. METER] BLUE 	370 1	J3	JUNCTION CONNECTOR 	371 3
C11	(C) 4WD INDICATOR LIGHT [COMB. METER] BROWN 	370-1	J15	JUNCTION CONNECTOR 	371-4
D1	DETECTION SW (Transfer 4WD Position) GRAY 	370-2	T3	2-4 SELECT MOTOR 	371-3
D2	DETECTION SW (Transfer L4 Position) BLUE 	370-2	T4	2-4 SELECT SW 	371-4
F11	4WD CONTROL ECU 	370-1 370-2 371-3 371-4	V4	VSV (2WD, ADD) BROWN 	371-4

PARTS CODE	PARTS & CONNECTOR TYPE	LOCATION	PARTS CODE	PARTS & CONNECTOR TYPE	LOCATION
V5	VSV (4WD, ADD) BLUE 	371-4			

	Relays, Fuses and J/B etc.	Parts connector position	Joint connectors and Ground points
See page	26 to 36	38 to 77 (LHD), 78 to 125 (RHD)	126 to 143 (LHD), 144 to 165 (RHD)