


CONDENSER FAN

ON-VEHICLE INSPECTION

1. DISCONNECT NEGATIVE (-) TERMINAL CABLE FROM BATTERY

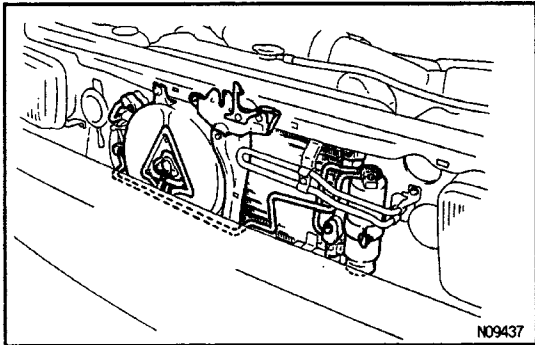


2. INSPECT CONDENSER FAN

- (a) Disconnect the fan connector.
- (b) Connect battery and ammeter to the cooling fan connector.
- (c) Check that the condenser fan rotate smoothly, and check the reading on the ammeter.

Standard amperage:

$8.0 \pm 0.7 \text{ A}$

- (d) Connect the fan connector.

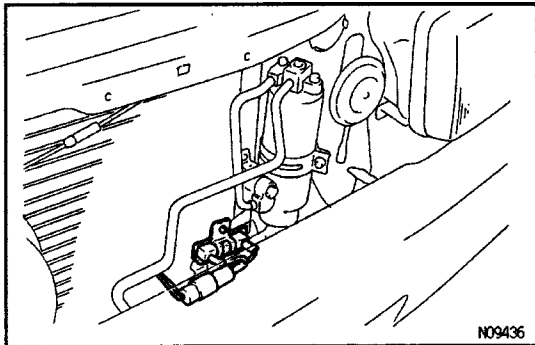

3. INSPECT FAN SPEED CONTROL RESISTOR

- (a) Remove the front grille.
- (b) Using an ohmmeter, check the resistance of the resistor.

Standard resistance:

$0.6 \pm 0.06\Omega$ at 20° (68°F)

If resistance is not as specified, replace the resistor.