

## SENSOR ROTOR (A340E)

### SENSOR ROTOR REMOVAL



#### 1. REMOVE EXTENSION HOUSING

(See page [AT1-66](#))

#### 2. REMOVE SPEEDOMETER DRIVE GEAR

- (a) Using snap ring pliers, remove the snap ring.
- (b) Slide off the speedometer drive gear.
- (c) Remove the lock ball.

#### 3. REMOVE SENSOR ROTOR FROM OUTPUT SHAFT

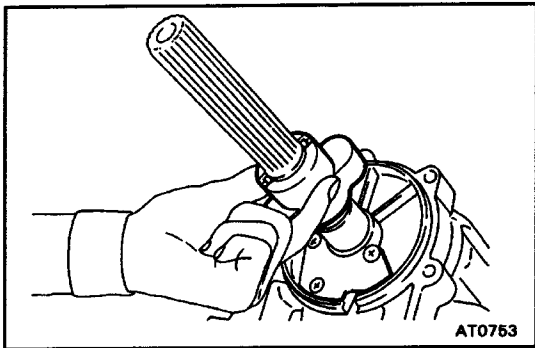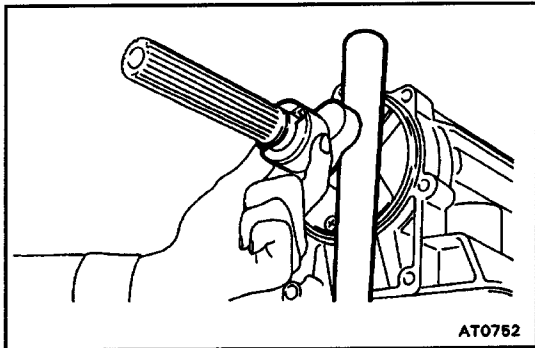

### SENSOR ROTOR INSTALLATION

#### 1. INSTALL SENSOR ROTOR ON OUTPUT SHAFT

- (a) Make sure that the key is installed in the groove.
- (b) Install the sensor rotor on the shaft.

#### 2. INSTALL SPEEDOMETER DRIVE GEAR

- (a) Slide the lock ball and the speedometer drive gear on the output shaft.
- (b) Using snap ring pliers, install the snap ring.

#### 3. INSTALL EXTENSION HOUSING

(See page [AT1-67](#))

