

THROTTLE CABLE

THROTTLE CABLE REMOVAL

1. DISCONNECT THROTTLE CABLE

- Disconnect the cable housing from the bracket.
- Disconnect the cable from the throttle linkage.

2. REMOVE VALVE BODY

(See page [AT1-56](#))

3. PUSH THROTTLE CABLE OUT OF TRANSMISSION CASE

Remove the retaining bolt and pull out the throttle cable.

THROTTLE CABLE INSTALLATION

1. INSTALL CABLE IN TRANSMISSION CASE

Install the retaining bolt and push in the throttle cable.

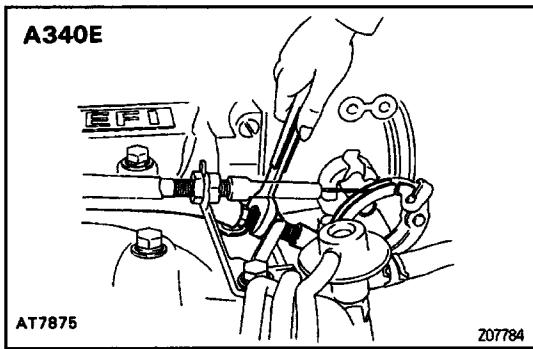
2. INSTALL VALVE BODY

(See page [AT1-58](#))

3. IF THROTTLE CABLE IS NEW, STAKE STOPPER ON INNER CABLE

HINT: New cable does not have a staked cable stopper.

- Bend the cable so there is radius of about 200 R.
- Pull the inner cable lightly until a slight resistance is felt, and hold it.
- Stake the stopper, 0.8 – 1.5 mm (0.031 – 0.059 in.) from the end of outer cable.

**4. CONNECT THROTTLE CABLE**

- (a) Connect the cable to the throttle cable.
- (b) Connect the cable housing to the bracket.

5. ADJUST THROTTLE CABLE

(See page [AT1-25](#))

6. TEST DRIVE VEHICLE