
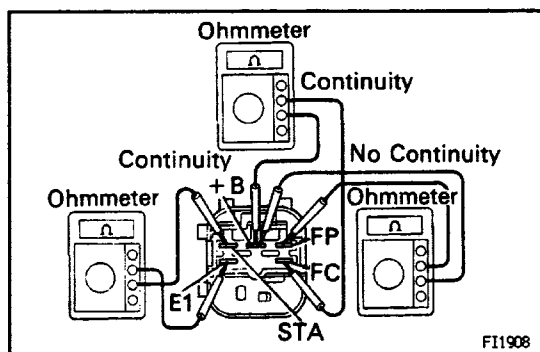


CIRCUIT OPENING RELAY

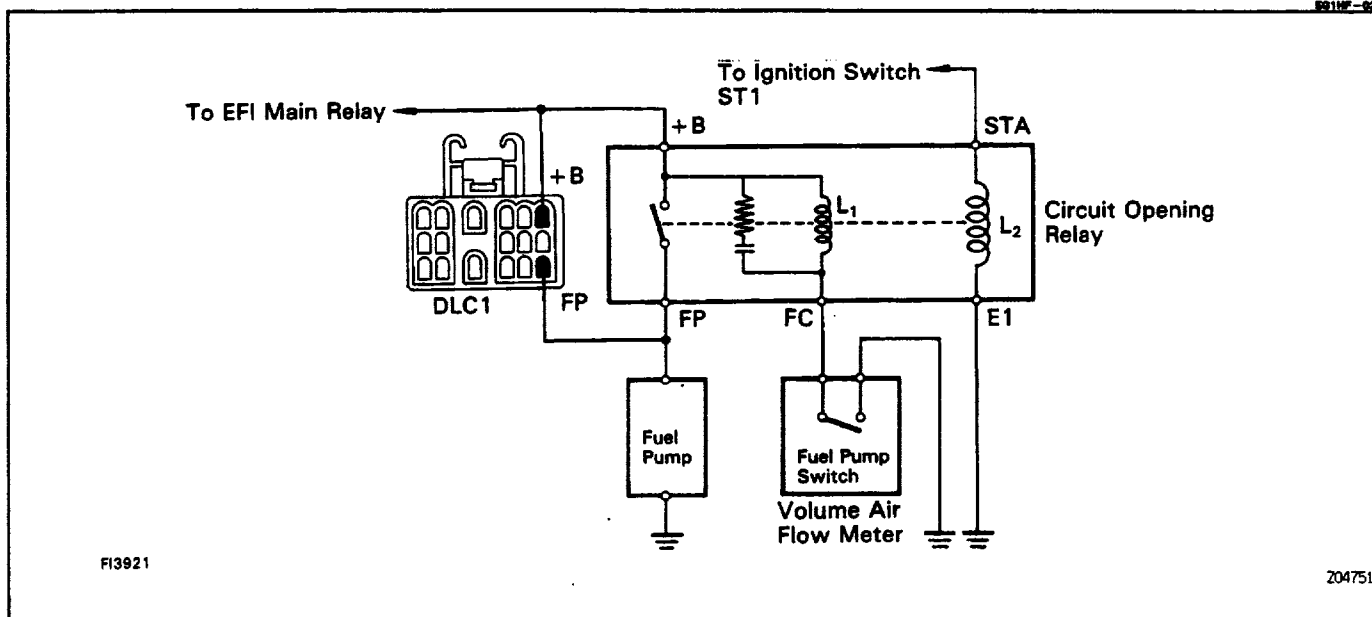

CIRCUIT OPENING RELAY INSPECTION



1. INSPECT RELAY CONTINUITY

- Using an ohmmeter, check that there is continuity between terminals STA and E1.
- Check that there is continuity between terminals +B and FC.
- Check that there is no continuity between terminals +B and FP.

If continuity is not as specified, replace the relay.

2. INSPECT RELAY OPERATION

- Apply battery voltage across terminals STA and E1.
- Using an ohmmeter, check that there is continuity between terminals +B and FP.

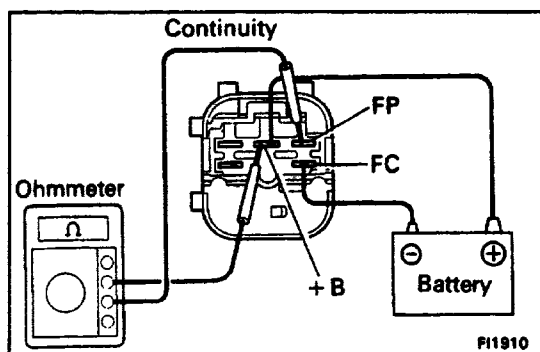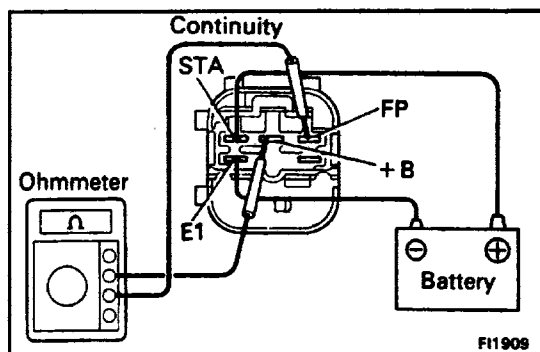

- Apply battery voltage across terminals +13 and FC.
- Check that there is continuity between terminals +B and FP.

If operation is not as specified, replace the relay.