


VEHICLE LIFT AND SUPPORT LOCATIONS


[2WD]

←
Front

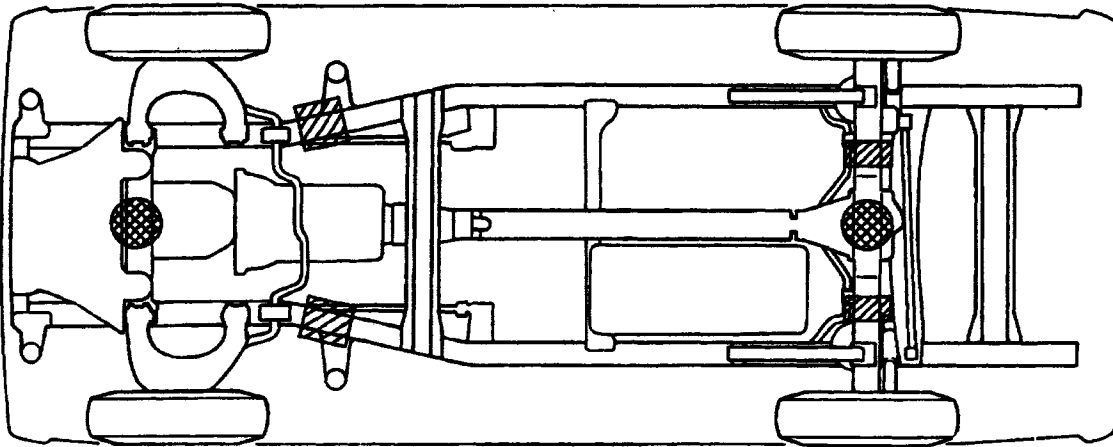

[4WD]

←
Front

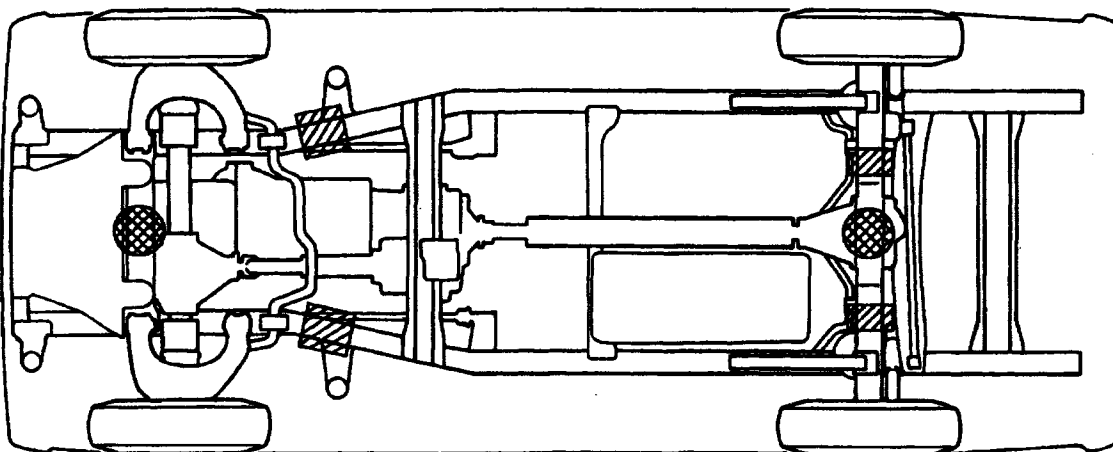

JACK POSITION 
 Front Center of crossmember
 Rear Center of rear axle housing

SUPPORT POSITION
 Safety stand 

IN0222
IN0223