
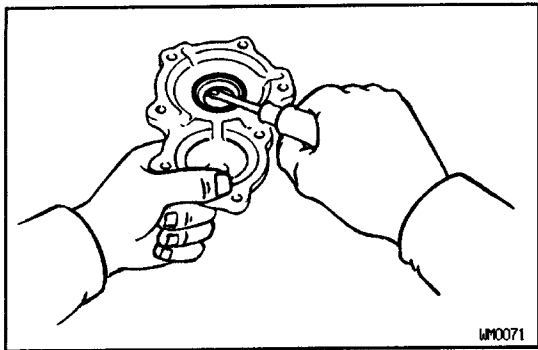



FRONT BEARING RETAINER COMPONENTS

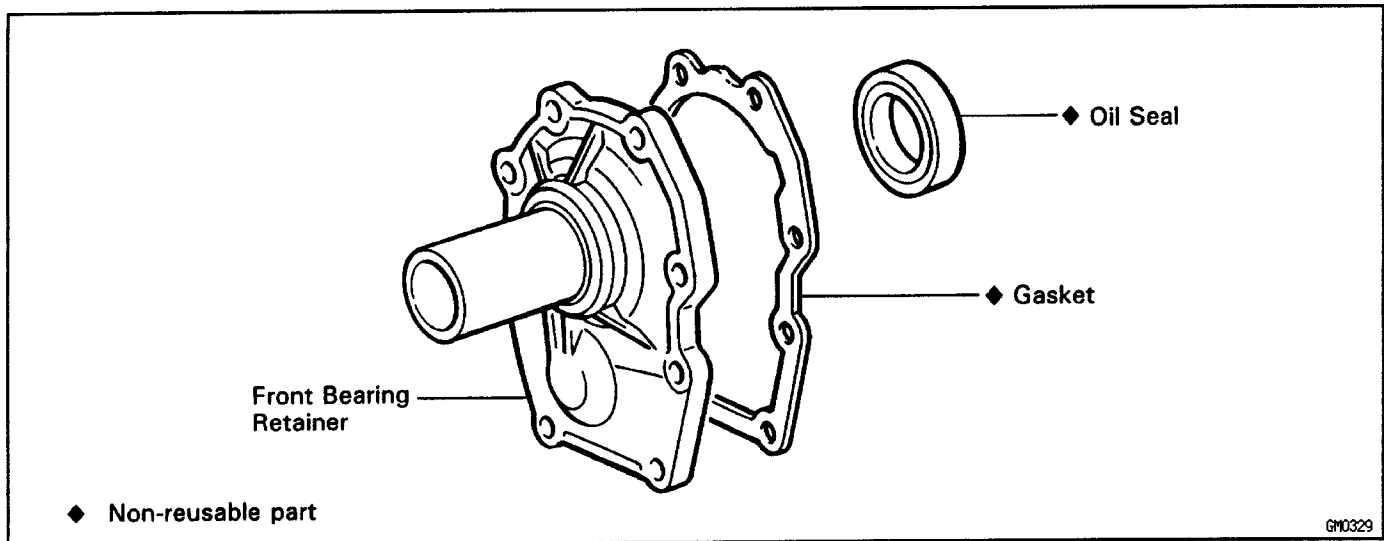

OIL SEAL REPLACEMENT

IF NECESSARY, REPLACE FRONT BEARING RETAINER OIL SEAL

(a) Using a screwdriver, pry out the oil seal.

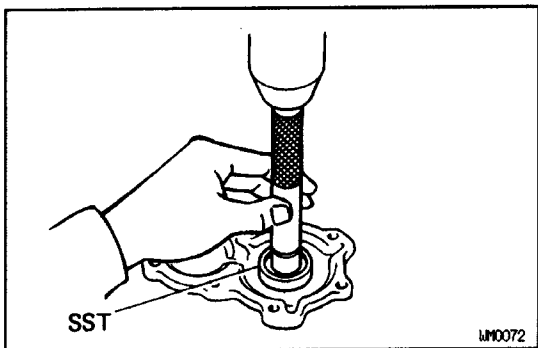

(b) Using SST and a press, press in a new oil seal.

SST 09223-50010

Oil seal depth:

12.2–13.2 mm (0.480–0.520 in.)

Transmission case installation surface.

(c) Coat the lip of the oil seal with MP grease.