



## FRONT BEARING RETAINER COMPONENTS

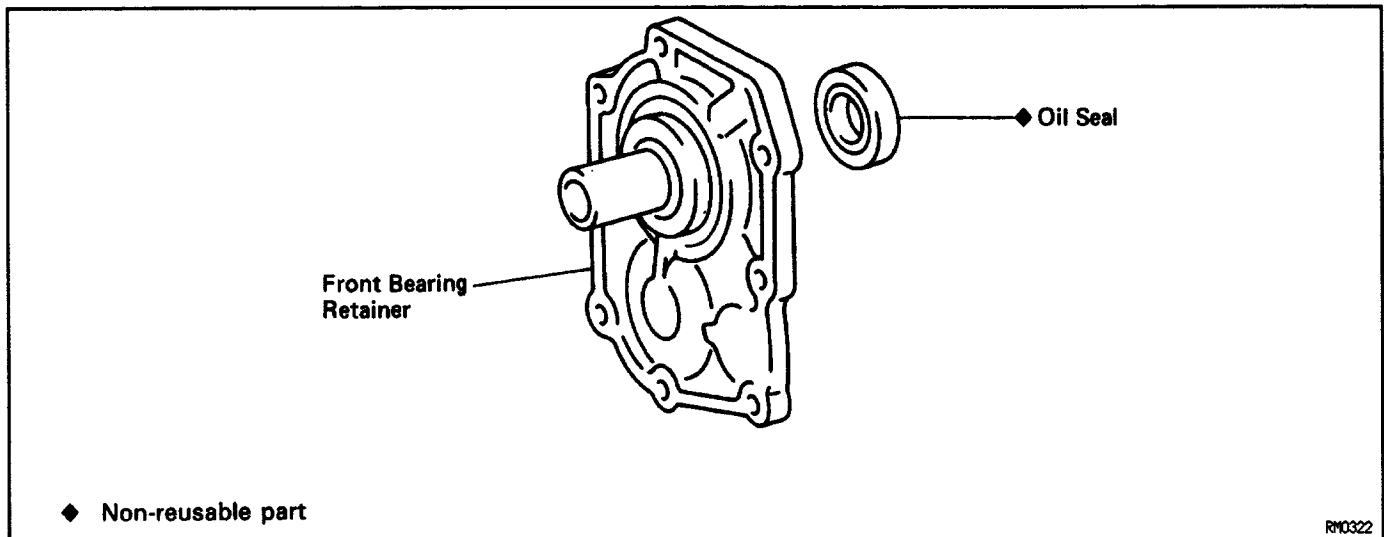

### OIL SEAL REPLACEMENT

IF NECESSARY, REPLACE FRONT BEARING RETAINER OIL SEAL

(a) Using a screwdriver, pry out the oil seal.

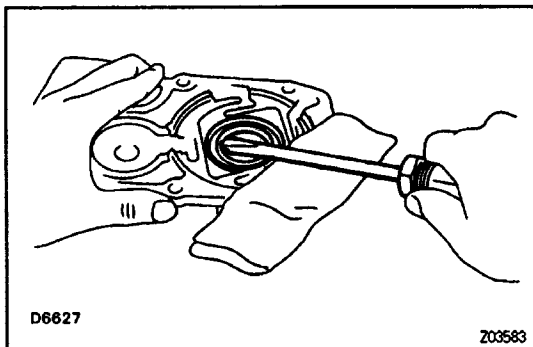

(b) Using SST and a hammer, drive in a new oil seal.  
SST 09608 – 35014 (09608 – 06020, 09608 – 06090)

Oil seal depth:

11.2 – 12.2 mm (0.441 – 0.480 in.)

from retainer end

