


100

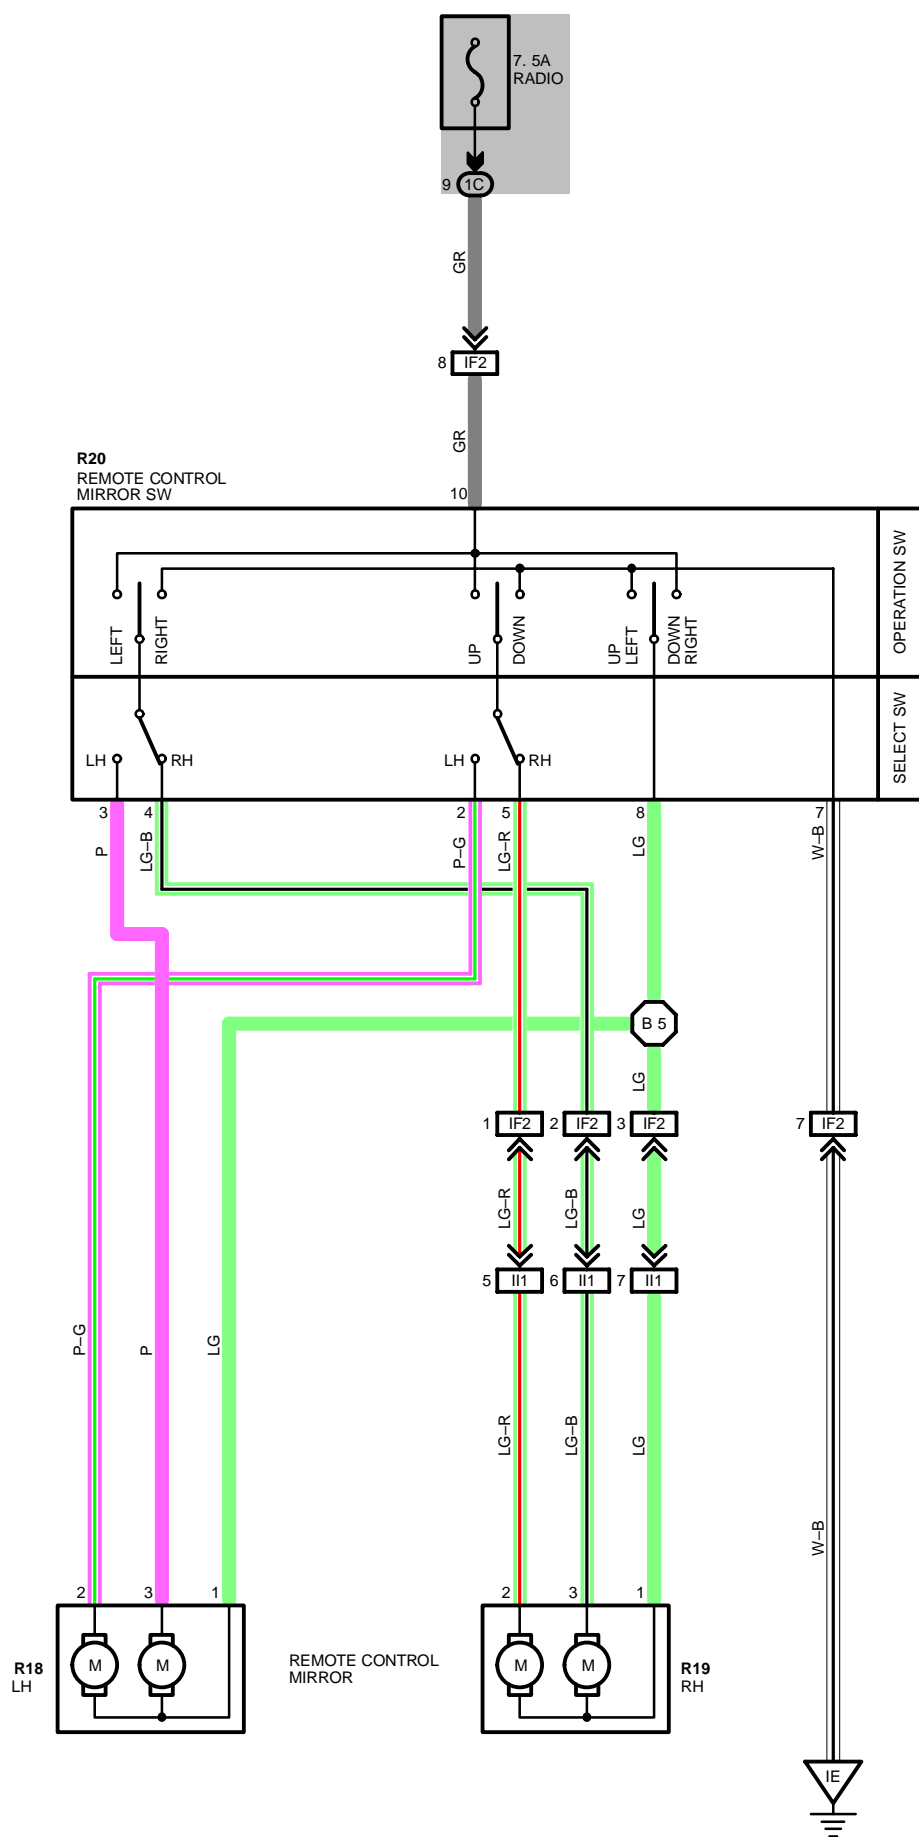

## SERVICE HINTS

### R20 REMOTE CONTROL MIRROR SW

- 7-GROUND : ALWAYS CONTINUOUS
- 10-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION
- 8-7 : CONTINUOUS WITH OPERATION SW AT **UP** OR **LEFT** POSITION
- 10-8 : CONTINUOUS WITH OPERATION SW AT **DOWN** OR **RIGHT** POSITION

### ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
R 18	29	R 19	29	R20	29

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IF2	34	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
II1	34	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)

### ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	34	LEFT KICK PANEL

### ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B 5	36	FRONT DOOR RH WIRE			

R 18, R 19



R 20

