


# HEADLIGHT (w/o DAYTIME RUNNING LIGHT)

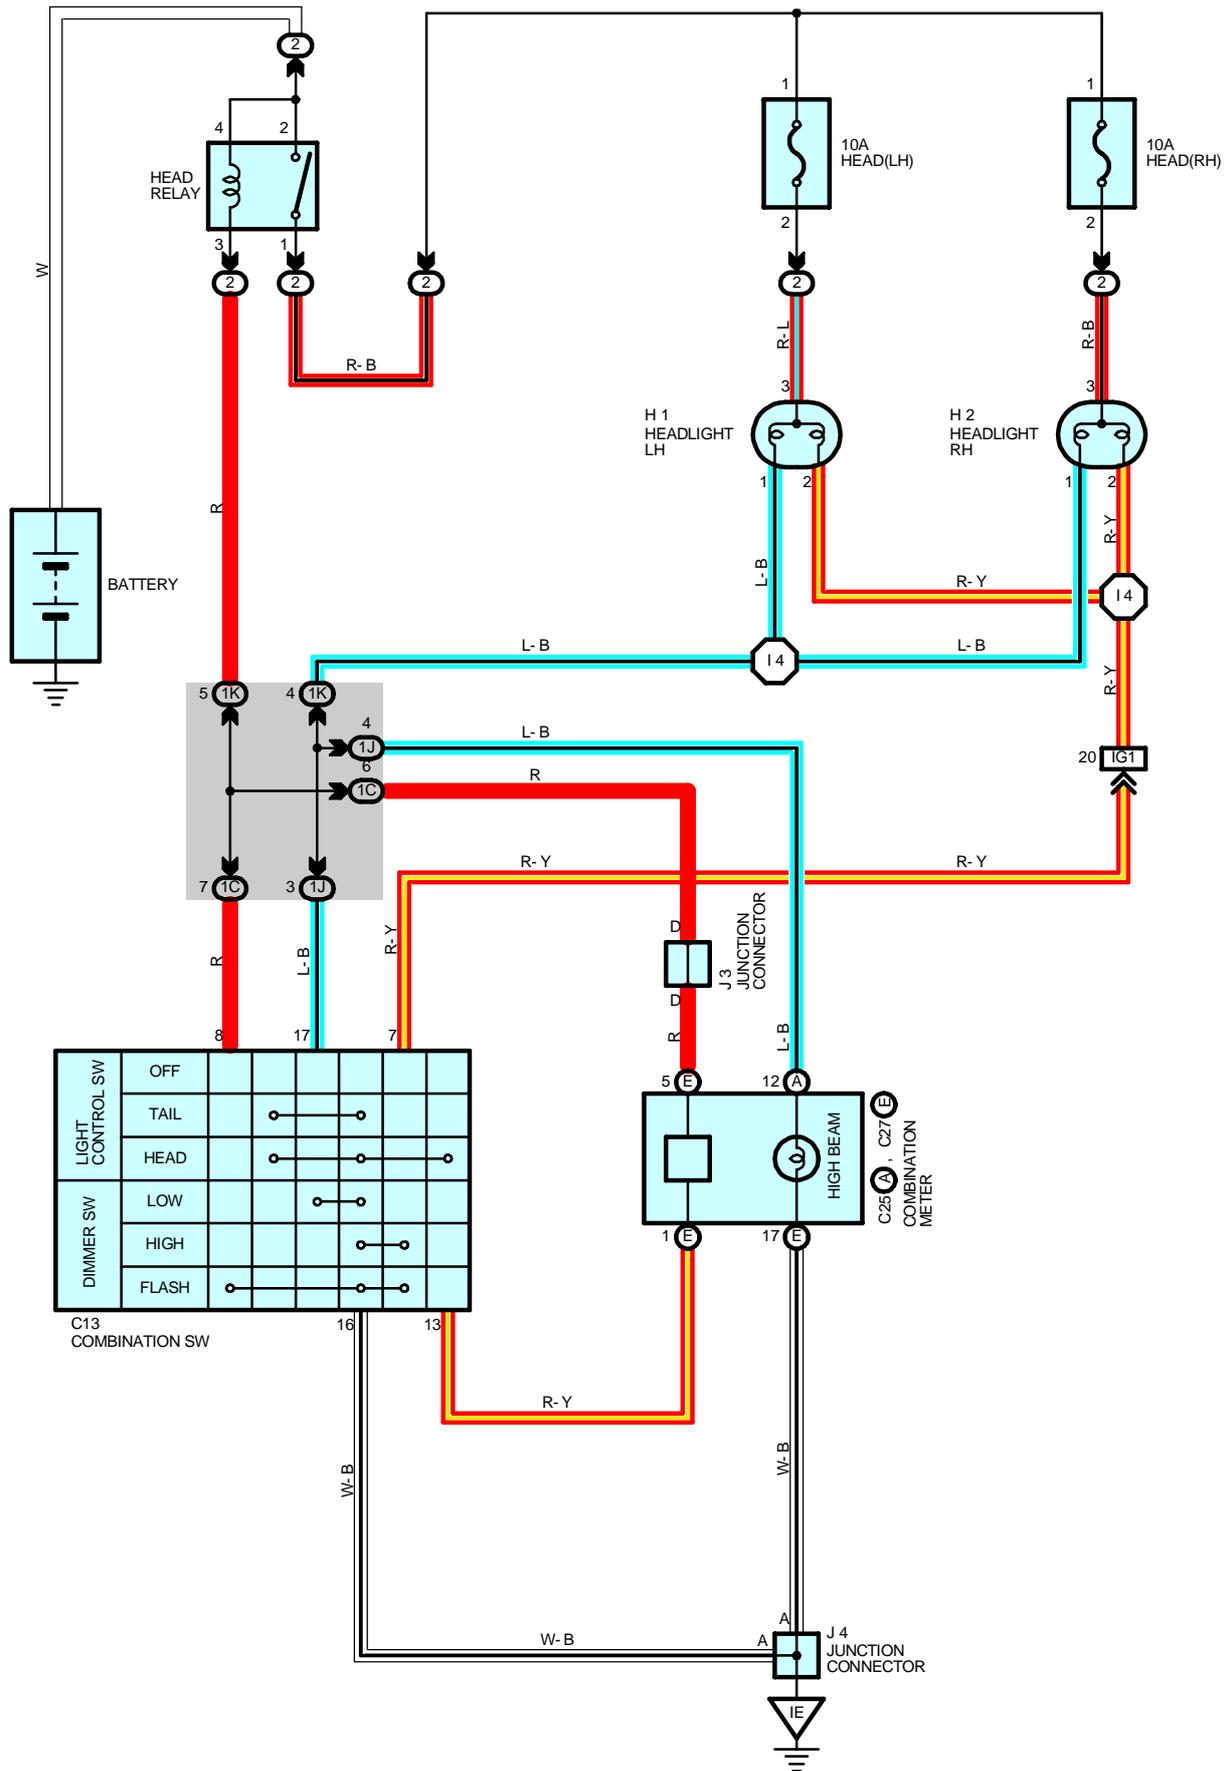

**SERVICE HINTS****HEAD RELAY**2-1 : Closed with light control SW at **HEAD** position or dimmer SW at **FLASH** position : **PARTS LOCATION**

Code	See Page	Code	See Page	Code	See Page
C13	30	H1	28	J4	31
C25	A 30	H2	28		
C27	E 30	J3	31		

 : **RELAY BLOCKS**

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

 : **JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1J		
1K	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)

 : **CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	38	Engine Room Main Wire and Cowl Wire (Left Kick Panel)

 : **GROUND POINTS**

Code	See Page	Ground Points Location
IE	38	Cowl Side Panel LH

 : **SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I4	40	Engine Room Main Wire			